
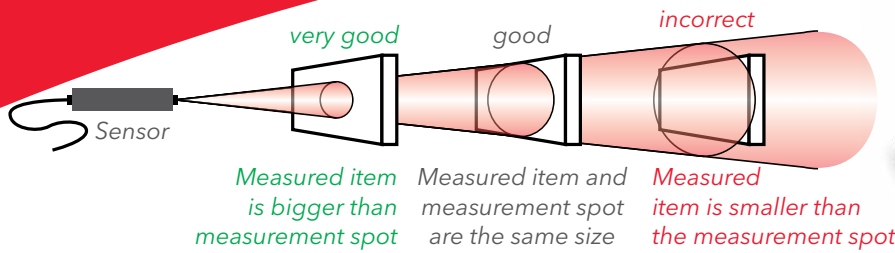


# Infrared Measurement

WITH THE TLC 730

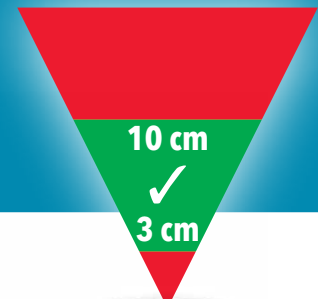

*The ideal measurement distance is between 3 cm and 10 cm*

## For optimal measurement results, please keep the following in mind:

- Ensure that the lens is clean prior to measuring. Carefully remove any fog or dust with a soft cloth.
- Allow the instrument to acclimate after moving from a warm room into a cold room or the reverse.
- Make sure the measurement is taken within the measurement distance guidelines (see picture).
- Record the temperature once the displayed value has stabilised.

## Further measurement recommendations:

Measure on metallic or shiny surfaces will cause incorrect results (e.g. yoghurt cover)

*incorrect*



*correct*



Do not measure in locations where there may be space between packaging and the product

*incorrect*



*correct*



The diameter of the entire measurement spot must always be on the measured item

*incorrect*



*correct*



## Headquarters:

ebro® Electronic GmbH · Peringerstraße 10 · D-85055 Ingolstadt  
Tel.+49 (841) 954 78-0 · Fax+49 (841) 954 78-80  
Internet: [www.ebro.com](http://www.ebro.com) · E-Mail: [ebro@xylem.com](mailto:ebro@xylem.com)

## Representatives worldwide:

[www.ebro.com](http://www.ebro.com)

**-ebro-**  
a xylem brand